

# **Precolor Easy**

Get creative, stay natural, love colours

Precolor Easy is a pre-colour, designed to always be used in combination with the Oil Plus 2C, to create special effects and contrasts. Enjoy unlimited creative possibilities thanks to the option to combine 14 different colours of Precolor Easy (which can be mixed with one another) with a finish in one of the 40 colours of the Oil Plus 2C range. At the same time, the optimal molecular bonding of the Oil Plus 2C with the wood remains guaranteed.



## **PRODUCT INFORMATION**

#### > Specific characteristics

- Natural look
- Water-based pre-treatment
- 14 unique colours
- Ready to use
- Unlimited combinations possible (all colours can be mixed with one another)
- Can be applied to almost all wood types and wood species (solid wood, veneer, mdf, etc.)
- Can be applied to all interior wood surfaces (caution, not advised on kitchen and bathroom counters)

## > Technical characteristics

- Physical state: liquid
- Flash point: > 60°C
- Density: 1,01 kg/L
- VOC content: 0 g/L
- Solubility in water: 100%

Drying time	± 12h The exact drying time depends on the surface, air humidity, temperature and ventilation.
Application information	All vertical and horizontal surfaces indoors
Consumption	10-15 m²/liter*
Working temperature	15-25°C
Humidity at application range	35-60%
Wood humidity	8-12%
Storage	Min. + 5°C, max. +30°C The product can be stored up to 12 months in dry, frost-free conditions and in its original packaging.
Remarks	This product is a pre-treatment and does not protect the wood. It has to be combined with Oil Plus 2C for maximum protection.

\* These usages are merely indicative. Results depend on wood type, sanding and method of preparation. It is always recommended to make a sample in order to calculate the exact usage.



TECHNICAL DATA SHEET INTERIOR

> Colours on Oak



Colours only serve as an example. We recommend doing a test on identical sanded wood.

## Packaging











## > Storage

The product can be stored for up to 12 months. Store in dry conditions and in the original packaging. Keep away from frost.



#### **APPLICATION INFORMATION**

Instructions

#### > Furniture and stairs

**STEP 1.** Sand the surface scratch-free. Finish with screening net 100 to 150, the colour intensity depends on the sanding method used.

• When renovating, you must remove all the residues from previous treatments completely (varnish, oil, wax, etc.).

**STEP 2.** Vacuum thoroughly and eliminate remains of dust with Cleaner. Wait until the surface is completely dry (check the technical datasheet of the Cleaner before use).

**STEP 3.** Stir the product thoroughly and regularly with a stirring stick.

**STEP 4.** Apply an amount of Precolor Easy with the Rubio Monocoat Brush and spread out using a red Scrubby Pad. Wipe out evenly with a lint-free cloth. Work in small areas to avoid overlapping.

**STEP 5.** Allow the surface to dry for  $\pm$  12 hours. The exact drying time depends on the foundation, moistening, temperature and ventilation.

STEP 6. After drying, break the raised wood fibres with a red Scrubby Pad and vacuum afterwards.

**STEP 7.** Now apply the Oil Plus 2C. Please consult the technical data sheet of the oil for a correct application. Be careful, in combination with Precolor Easy it is best to use a white Scrubby Pad instead of a beige or red one when applying the oil!

#### > Floors

**STEP 1.** Sand the surface scratch-free. Finish with screening net 100, the colour intensity depends on the sanding method used.

• When renovating, you must remove all the residues from previous treatments completely (varnish, oil, wax, etc.).

**STEP 2.** Vacuum thoroughly and eliminate remains of dust with Cleaner. Wait until the surface is completely dry (check the technical datasheet of the Cleaner before use).

**STEP 3.** Tape off areas of  $\pm$  90 cm, in the lengthwise direction of the boards.

**STEP 4.** Stir the product thoroughly and regularly with a stirring stick.

**STEP 5.** Apply the Precolor Easy with a Microfibre Pad. Make sure to use enough of the product and cover the whole area. Afterwards smooth out the area again with the same Microfibre Pad. Make sure that this pad is thoroughly wrung out.

**STEP 6.** Now skip an area and follow the instructions in step 5 again for this next area. Finish the whole room in this way and remove the tape. Allow the surface to dry for  $\pm$  12 hours.



## TECHNICAL DATA SHEET INTERIOR

**STEP 7.** Now tape off the untreated areas and apply the Precolor Easy as described in step 5. Repeat until the whole floor is treated. Afterwards remove the tape (tip: step on the already dried out areas to remove the tape).

**STEP 8.** Allow the surface to dry for  $\pm$  12 hours. The exact drying time depends on the foundation, moistening, temperature and ventilation.

**STEP 9.** After drying, break the raised wood fibres with a floor polisher equipped with a red Pad and vacuum afterwards.

**STEP 10.** Now apply the Oil Plus 2C. Please consult the technical data sheet of the oil for a correct application. Be careful, in combination with Precolor Easy it is best to use a white Pad instead of a beige or red one when applying the oil!


#### > Industrial application

If you want to apply this product in an industrial manner, we advise you to get in contact with our technical service team.

#### > Tips & Tricks

- Stir the product well before application.
- When using several containers at one site, it is required to mix them for an even result.
- Switch off the floor heating 48 hours before application.
- Do not use in combination with water-based finishing products, such as Invisible Protector.
- Difficult to apply on herringbone parquet.
- Keep in mind that the wood type, grain structure and porosity of the wood can influence the end result. Therefore, it is important to make a sample first on the chosen wood species or the surface that needs treating.

#### > Tools

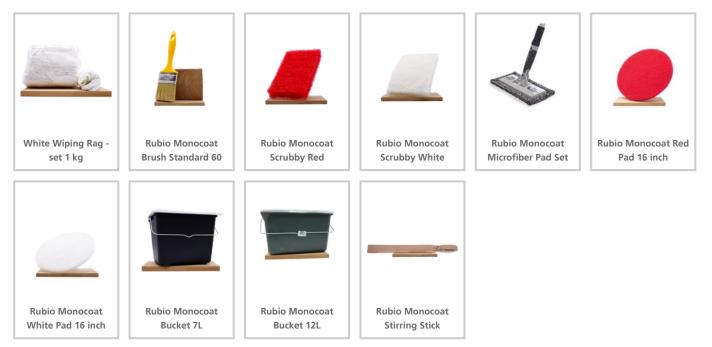



> Certificates



Check the packaging and the safety data sheet for more details.

For our complete assortment of products for the protection and colouring of interior and exterior wood, please visit **www.rubiomonocoat.com** 

**LIABILITY**: It is the user's responsibility to establish, through his own tests, whether the product is suitable for the chosen application. In no case can Muylle Facon NV be held liable for any consequential damage. The information above may be subject to changes, which will be published in the updated versions of the technical data sheet. We cannot be held liable for poor results due to causes that are not related to the quality of the product. This technical information has been drawn up based on the currently available information and knowledge. The most recent technical data sheets can be requested or are available on the website.

Date of TDS: 11/04/2024. Check the safety information before using the product.

TSOZERT



Muylle Facon NV Ambachtenstraat 58 8870 Izegem (BELGIUM)

Phone +32 (0) 51 30 80 54 Fax +32 (0) 51 30 99 78 info@muyllefacon.be

www.rubiomonocoat.com