

SheenPlus

For an oiled look with extra sheen

Rubio Monocoat SheenPlus is a 0% VOC wood finish that provides a durable satin look to wooden surfaces that have been finished with Rubio Monocoat Oil Plus 2C. This product may be applied on all indoor wood surfaces, including furniture, countertops, tables, stairs, walls, floors, etc., finished with Oil Plus 2C. The combination of the oil (A) and accelerator (B) ensures a fast cure time, resulting in excellent protection. Plus, it's solvent and water-free.



PRODUCT INFORMATION

› Specific characteristics

- Long-lasting satin finish
- No overlapping
- High spread rate
- Scratch-resistant result
- Based on natural ingredients, 0% VOC
- To be applied by hand, or using a floor buffer outfitted with a pad
- 100% solid content

› Technical characteristics

- Base: blend of natural oils
- Consistency: liquid
- Flash point cc (astm d93): > 140 °F (60 °C)
- Density: ± 1.05 kg/L
- VOC content: 0 g/L

| | |
|--|---|
| DRYING TIME | 24 - 36h |
| CURING TIME | 7 days |
| APPLICATION INFORMATION | All vertical and horizontal interior surfaces (e.g. floors, tabletops, furniture, bathrooms, kitchens, stairs, walls, etc.) |
| SPREAD RATE | 1,000 - 1,600 SF/Liter* |
| IDEAL WORKING TEMPERATURE | 60 - 77 °F (15 - 25 °C) |
| RELATIVE HUMIDITY APPLICATION RANGE | 35 - 60% |
| WOOD MOISTURE CONTENT RANGE (MC) | 8% - 12% |
| STORAGE | 41 °F - 86 °F (+ 5 °C max. - + 30 °C) The product can be stored up to 36 months in dry conditions and in its original packaging. |

| | |
|-------------------|---|
| CLEANING | Earliest after 2 days: dry cleaning only Earliest after 7 days: cleaning with water and Universal Soap or Surface Care |
| ADVANTAGES | Increase satin sheen over Oil Plus 2C |
| POTLIFE | SheenPlus may be used for a maximum of 4-6 hours after mixing A and B component together. |

** These usages are merely an estimate. Results depend on the wood type and method of preparation. It is always recommended to make a sample in order to calculate the exact usage.*

› Packaging



Set A + B 130 ml



Set A + B 350 ml



Set A + B 1,3 L

› Storage

The product can be stored up to 36 months in dry conditions and in its original packaging. Protect against freezing.

APPLICATION INFORMATION

› Instructions

› Preparation

SheenPlus is designed for use on wood surfaces finished with Oil Plus 2C. Prepare the surface according to the appropriate method outlined in the scenarios below.

Scenario 1. Unfinished wood surfaces:

First, apply Oil Plus 2C to the wooden surface. Refer to the [Oil Plus 2C technical data sheet](#) for application instructions. After a drying time of at least 24-36 hours, apply SheenPlus.

Scenario 2. Previously Finished with Oil Plus 2C (Colour Intact):

Thoroughly clean the surface using [Rubio Monocoat Soap](#), then clean again with water to remove any remaining soap residues, ensuring the surface is properly cleaned without any leftover residue. Once the surface is completely dry, apply SheenPlus.

Scenario 3. Previously Finished with Oil Plus 2C (Colour Needs Restoration):

First renovate the surface with Oil Plus 2C, in the colour with which the surface was originally finished. Refer to the TDS for Oil Plus 2C renovation guidelines listed under [Instructions Repair and Renovation](#). After a drying time of at least 24-36 hours, apply SheenPlus.

› Instructions

Application on furniture and tables

STEP 1. Let the Oil Plus 2C dry for at least 24 - 36 hours.

STEP 2. Thoroughly mix the two SheenPlus components together for 1 to 2 minutes, ensuring a ratio of approximately 3 units A to 1 unit B.

STEP 3. Apply a small amount of SheenPlus with a brush and spread it further with a red Scrubby Pad. Within 15 minutes, go over the oiled surface again with the same red scrubby pad without adding additional product, ensuring that the oil is distributed evenly.

STEP 4. Finish this area with a white Scrubby Pad until the surface is completely even and rubbed dry.

STEP 5. Remove any streaks and/or surface irregularities with a lint-free cloth.

STEP 6. Immediately after wiping with the cloth, wipe the oiled surface one more time with the same white pad that was used in STEP 4 (make sure to use the oily side of the pad to do this final step). Wipe the surface in a circular motion and finish wiping the surface in the length of the boards to finish the SheenPlus application.

STEP 7. Let dry for at least 24 hours before light use of the surface. To ensure effective drying and curing, it is important to maintain proper ventilation and temperature. Full curing takes place in 7 days.

Application on floors

STEP 1. Let the Oil Plus 2C dry for at least 24 - 36 hours.

STEP 2. Thoroughly mix the two SheenPlus components together for 1 to 2 minutes, ensuring a ratio of approximately 3 units A to 1 unit B.

STEP 3. Apply a small amount of SheenPlus using a floor buffer with a red buffer pad. Spread the product so that no irregularities can be seen in the treated area. Preferably treat areas of 20 to 40 SF (areas that are not too wide). Make sure you can easily treat the area with the floor buffer without stepping in wet product.

- Tip: If the layout of the area being treated does not allow you to work without standing in the still wet product, use a white pad to stand on during application.

STEP 4. Within 15 minutes, finish this area with a white buffer pad until the surface is completely even and rubbed dry.

STEP 5. To complete the entire floor, repeat steps 3 and 4.

STEP 6. Let dry for at least 24 hours before carefully walking on the surface. To ensure effective drying and curing, it is important to maintain proper ventilation and temperature. Full curing takes place in 7 days.

› **Maintenance Instructions**

Renovation/maintenance

If the product starts to show too much wear (traffic pattern), you can resolve this by applying a new coat. First, make sure to remove any dust and dirt prior to applying a maintenance coat. Refer to the steps on pages 2-3 for the proper cleaning and application instructions.

When Oil Plus 2C colour wear is evident, first perform a repair/renovation with the original Oil Plus 2C colour (Part A & B must be used for the colour restoration). After that, let dry for at least 24 - 36 hours. Then, apply SheenPlus to the repaired area and let it dry for 24 hours. After that, apply SheenPlus to the entire floor surface.

> Tips & tricks

- It is mandatory to add the SheenPlus component B in the correct ratio to the SheenPlus component A.
- It is important to allow a minimum drying time of 24 hours between the application of the Oil Plus 2C and the SheenPlus. To avoid colour pull when applying SheenPlus, allow Oil Plus 2C to completely dry. If you notice excessive colour pull, give the Oil Plus 2C more time to dry before applying SheenPlus.
- When applying SheenPlus to floors on site, it's important to use a floor buffer.
- After applying SheenPlus, the curing process takes 7 days. It is important to only use dry cleaning methods during this period. Afterwards, damp cleaning can be done with Universal Soap, Surface Care Spray or a water dampened mop. We recommend cleaning with a microfiber mop or damp cloth no more than once a week.
- Do not apply too much product to avoid the surface becoming sticky.
- Due to the higher viscosity, we recommend using a red pad for the initial application and spreading of the SheenPlus instead of a white one.
- The product may not be diluted.

REMARK

The product may not be diluted.



WARNING

Cloths and other application tools, saturated with oil, may spontaneously combust. After usage, immerse them in water and leave them for a while before disposing of them.


> Spread rate

| Packaging | Approximate spread rate |
|-----------|---------------------------|
| 130 ml | 130 - 208 square feet |
| 350 ml | 350 - 560 square feet |
| 1,3 L | 1,300 - 2,080 square feet |

> Tools



› Related products

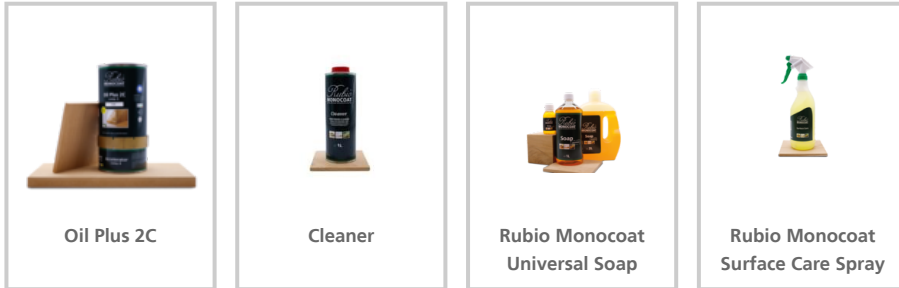

› Certificates



Check the packaging and the safety data sheet for more details.

For our complete assortment of products for the protection and colouring of interior and exterior wood, please visit

www.rubimonocoatusa.com

LIABILITY: It is the user's responsibility to establish, through his own tests, whether the product is suitable for the chosen application. In no case can Muylle Facon NV be held liable for any consequential damage. The information above may be subject to changes, which will be published in the updated versions of the technical data sheet. We cannot be held liable for poor results due to causes that are not related to the quality of the product. This technical information has been drawn up based on the currently available information and knowledge. The most recent technical data sheets can be requested or are available on the website.

Date of TDS: 25/03/2025. Check the safety information before using the product.



Rubio[®] MONOCOAT

MUYLLE  FACON

Muyllé Facon NV
Ambachtenstraat 58
8870 Izegem (BELGIE)

Tel. +32 (0) 51 30 80 54
Fax +32 (0) 51 30 99 78
info@muylléfacon.be

www.rubimonocoat.com